



**IMPORTANT: Please advise the serial number, located on the nameplate of your unit, when ordering parts.**

- NOTE: For part number, specify voltage, torque rating and class of insulation.
- Quantity of springs used will be determined by torque rating.
- ♦ Specify shaft diameter or bore and keyway size.
- \* If required.
- \*\* Sold as 1 set (set includes 1 complete left side and 1 complete right hand side).
- \*\*\* Part number 43203-\_\_ to be completed by using bore and keyway chart ED-D1143A or by clearly stating required bore keyway size.

ITEM	PART NAME OR DESCRIPTION	QTY	PART NO.
55	Gasket (DTWP) cork	1	84064
55	Gasket (DTWP) Rubber	1	84092
902	Brake Shim	as needed	83010
903	Armature Assembly	1	01075
904	Stator Assembly	1	•
905	Friction Disc-Spine	1	97021
906	Compression Plate	1	45212-001
908	Manual Release Spring (left)	1	94221
909	Manual Release Spring (right)	1	94221
912	Manual Release Assembly**	1 set	01080
914	Guide Pin	8	94031
915	Brake Hub***	1	43203-__
916	Torque Spring	▪	94201
917	Bearing Closure	1	28035
919	Bearing*	1	91206-14
920	Bearing*	1	91206-14

ITEM	PART NAME OR DESCRIPTION	QTY	PART NO.
921A	Brake Shaft (S.E. Solid Shaft)	1	59031-♦
921B	Brake Shaft (D.E. Solid Shaft)	1	59032-♦
921C	Brake Shaft (H. Shaft Only)	1	59023-♦
922	Housing Plug	1	45004
923	Foot Mounting Adapter	1	29081-002
925	Terminal Box	1	10015-002
925	Terminal Box Cover	1	10016
927	Seal	1	93122
928	Seal	1	93122
930	Housing (Foot Mounted Brake Only)	1	09014
930	Housing Assembly (adjustable)	1	09012
930	Housing Assembly (non-adjustable)	1	09011
931	Housing Cover Bolt	3	94256-208
933	Torque Adjustment Spring	2	94204
937	Gasket (Terminal Box Cover)	1	84006
938	Torque Adjustment Screw	2	94102



PO Box 180074 – Delafield, WI 53018-0074

P 262-524-0746 F 888-761-1060