



IMPORTANT: Please advise the serial number, located on the nameplate of your unit, when ordering parts.

- NOTE: For part number, specify voltage, torque rating and class of insulation.
- Quantity of springs used will be determined by torque rating.
- ♦ Specify shaft diameter or bore and keyway size.
- * If required.
- ** Sold as 1 set (set includes 1 complete left side and 1 complete right hand side).
- *** Part number 43211-___ to be completed by using bore and keyway chart ED-D1143A or by clearly stating required bore keyway size.

ITEM	PART NAME OR DESCRIPTION	QTY	PART NO.
903	Armature Assembly	1	01255
904	Stator Assembly (AC)	1	•
904	Stator Assembly (DC)	1	•
905	Friction Disc	1	97022
908	Manual Release Spring (left)	1	94208
909	Manual Release Spring (right)	1	94209
911	Manual Release Assembly** (left)	1	01143
912	Manual Release Assembly** (right)	1	01142
913	Manual Release Stop Pin	2	94017
915	Brake Hub***	1	43211-___
916	Torque Spring	▪	94203
917	Bearing Closure	1	29073-003
918	Bearing Closure	1	29073-004
919	Bearing	1	91309-14
920	Bearing	1	91309-14

ITEM	PART NAME OR DESCRIPTION	QTY	PART NO.
921A	Shaft (single and extension)	1	59001-♦
921B	Shaft (double and extension)	1	59002-♦
922	Housing Plug	1	45002
923	Foot Mounted Adapter (solid shaft)	1	29071-002
925	Terminal Box	1	10015-002
925	Terminal Box Cover	1	10016
930	Housing Assembly	1	09054
931	Housing Cover Bolt	3	94254-304
937	Gasket (Terminal Box Cover)	1	84006
939	Shoulder Bolt	6	47199
944	Washer (90 lb/ft only)	6	45213
942	Elastic Stop Nut	2	94264
943	Nylock Set Screw	2	94258-012

