



**IMPORTANT: Please advise the serial number, located on the nameplate of your unit, when ordering parts.**

- NOTE: For part number, specify voltage, torque rating and class of insulation.
- Quantity of springs used will be determined by torque rating.
- ♦ Specify shaft diameter or bore and keyway size.
- \* If required.
- \*\* Sold as 1 set (set includes 1 complete left side and 1 complete right hand side).
- \*\*\* Part number 43203-\_\_ to be completed by using bore and keyway chart ED-D1143A or by clearly stating required bore keyway size.

ITEM	PART NAME OR DESCRIPTION	QTY	PART NO.
903	Armature Assembly (AC)	1	01093
903	Armature Assembly (DC)	1	01102
904	Stator Assembly (AC)	1	•
904	Stator Assembly (DC)	1	•
905	Friction Disc	1	97023
908	Manual Release Spring (left)	1	94222
909	Manual Release Spring (right)	1	94221
912	Manual Release Assembly**	1 set	01092
915	Brake Hub***	1	43203-__
916	Torque Spring (inner)	2	▪
916	Torque Spring (outer)	2	▪
917	Bearing Closure	1	28036-001
918	Bearing Closure	1	28036-003
919	Bearing	1	91306-14
920	Bearing	1	91207-14
921A	Shaft (single end extension)	1	59011-♦
921B	Shaft (double end extension)	1	59012-♦

ITEM	PART NAME OR DESCRIPTION	QTY	PART NO.
921C	Shaft (hollowshaft extension)	1	59021-♦
922	Housing Plug	1	45002
923	Foot Mounted Adapter (solid shaft)	1	29081-004
923	Foot Mounted Adapter (hollowshaft)	1	29081-003
925	Terminal Box	1	10015-002
925	Terminal Box Cover	1	10016
928	Seal (hollowshaft)	1	93122
930	Housing Assembly	1	09004
931	Housing Cover Bolt	4	94356-100
934	Brake Housing Base	1	29005
935	"O" Ring Gasket-(DTWP)	1	84011
936	"O" Ring Gasket-(DTWP)	1	84011
937	Gasket (Terminal Box Cover)	1	84006
938	Torque Adjustment Screw	2	47084
938A	Torque Adjustment Nut	2	47082
941	Cotter Pin	2	94262

