



IMPORTANT: when ordering replacement parts you must give part name, also type, frame, model and serial number from motor nameplate.

RENEWAL PARTLS LIST

ITEM	PART NAME OR DESCRIPTION
97	Coupling (motor)
98	Coupling (gear)
99	Coupling Sleeve
101	Gear Case
102	Bearing Plate
103	Bearing Plate
106	Bearing
107	Bearing
108	Bearing
109	Bearing
111	Bearing Cap
112	Output Shaft
113	Output Shaft Spacer

ITEM	PART NAME OR DESCRIPTION
117	Worm Gear
120	Seal
121	Seal
123	Worm Shaft
126	Bracket
127	Pressure Relief Valve
131	Ball Rod Assembly
132	Spring Rod Assembly
152	Bearing Plate Shim
153	Bearing Cap Shim