



**IMPORTANT: Please advise the serial number, located on the nameplate of your unit, when ordering parts.**

- NOTE: For part number, specify voltage, torque rating and class of insulation.
- Quantity of springs used will be determined by torque rating.
- ♦ Specify shaft diameter or bore and keyway size.
- \* If required.
- \*\* Sold as 1 set (set includes 1 complete left side and 1 complete right hand side).
- \*\*\* Part number 43203-\_\_\_ to be completed by using bore and keyway chart ED-D1143A or by clearly stating required bore keyway size.

ITEM	PART NAME OR DESCRIPTION	QTY	PART NO.
55A	Gasket (DTWP)	1	84106
55B	Gasket (DTWP)	1	84121
55C	Gasket (DTWP)	1	84110
903	Armature Assembly	1	01201
904	Stator Assembly	1	•
905	Friction Disc	1	97024
906	Compression Plate	1	45238
908	Manual Release Spring (left)	1	94222
909	Manual Release Spring (right)	1	94221
912	Manual Release Assembly**	1 set	01092
914	Guide Pin	4	94031
915	Brake Hub***	1	43203-___

ITEM	PART NAME OR DESCRIPTION	QTY	PART NO.
916	Torque Spring (1.5 lb/ft)	4	94205
916	Torque Spring (3 lb.ft)	4	94150
916	Torque Spring (6 lb/ft)	4	94149
916	Torque Spring (w/944 washer, 10 lb/ft)	4	94149
930	Brake Housing Assembly	1	09065
930	Brake Housing Assembly (DTWP)	1	09065-003
931	Housing Cover Bolt	2	94321-100
931A	Brake Mounting Bolt	2	94315-100
940	Cover Plate (Standard)	1	45258
940	Cover Plate (DTWP)	1	29080-004
944	Washer (10 lb/ft only)	4	45276

